

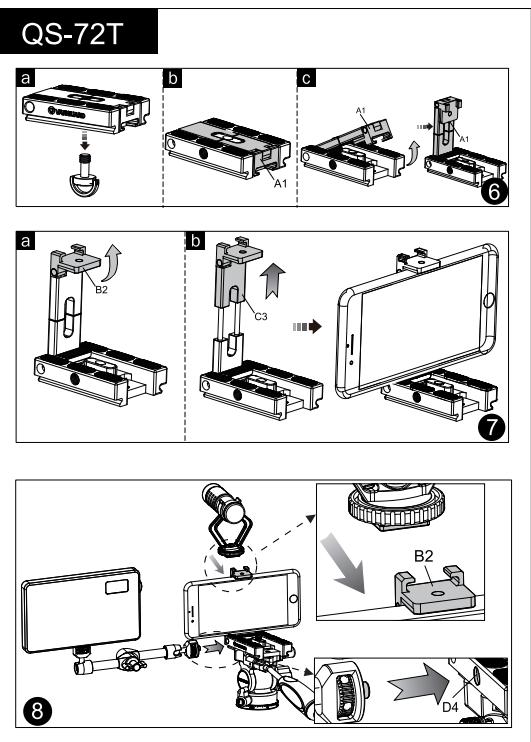
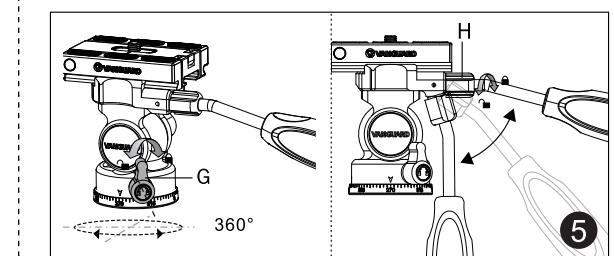
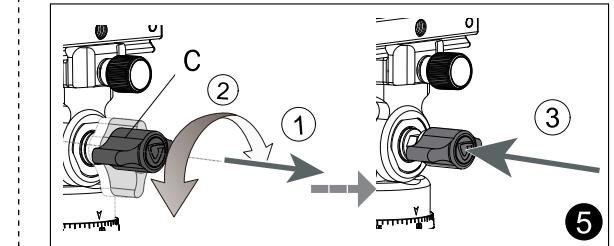
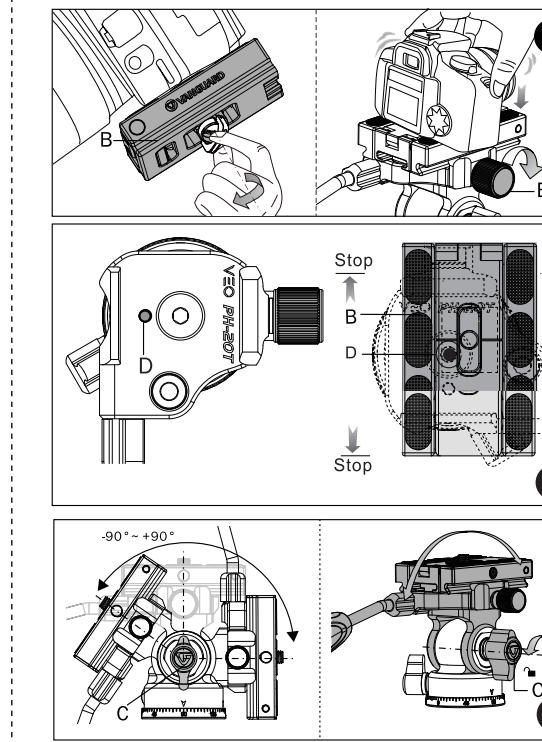
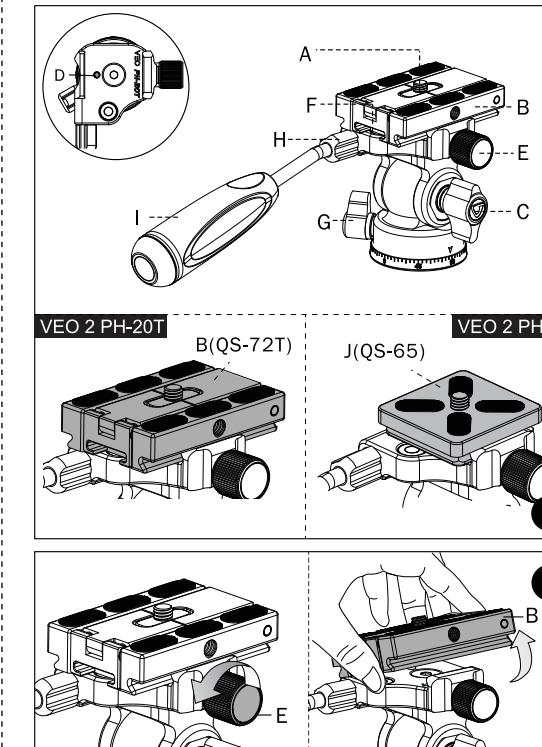


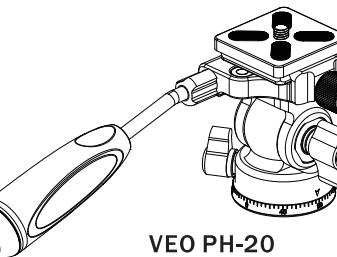

VEO 2-Way Pan Head with retractable handle


User Manual

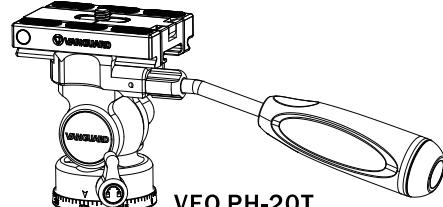

VANGUARD



www.vanguardworld.com

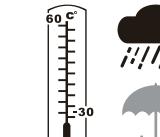

English

Thank you for purchasing this VANGUARD product.

① PART DESCRIPTION

- A: 1/4" Camera Screw
- B: Quick Shoe (QS-72T)
- C: Locking Knob for Tilting
- D: Quick Shoe Safety Pin
- E: Quick Shoe Knob Lock
- F: Bubble Level
- G: Panning Locking Knob
- H: Handle Locking Knob
- I: Handle
- J: Quick Shoe (QS-65)
- A1: Smartphone Holding Arm
- B2: Upper Smartphone Clamp
- C3: Smartphone Holding Arm Apart
- D4: 1/4" Camera Screw Hole

② REMOVING THE QUICK SHOE

Turn quick shoe knob lock "E" counterclockwise as shown until the quick shoe is unlocked and removable, as shown.
The quick shoe can be locked into place in any of the four directions, as shown.

③ ATTACH THE QUICK SHOE TO YOUR CAMERA

Line up the camera screw with your camera and insert. The quick shoe is fitted with a D-ring screw. Turn D-ring clockwise until fully tightened, then place the quick shoe "B" on the pan head as shown of fig.3.

Note: In order to use the bubble level properly, it must face the same direction as the camera screen.

④ SAFETY PIN

The safety pin prevents unwanted camera movement.

English

⑤ PAN HEAD MOVEMENT RING

- a: The pan head can tilt between 90°(±1) to -90°(±1). Unlock the locking knob for tilting by turning "C" counterclockwise. Position camera at the desired angle. Lock "C" by turning clockwise.
- b: When "C" is turned and there is an obstruction preventing it being fully released, you can pull it out and clean it/rotate to a more suitable position, and continue to lock or release. See fig 5.
- c: Unlock the panning locking knob "G" by turning it in counterclockwise. Rotate head to desired position. When finished, lock head back into place by turning "G" in clockwise. When paired with the pan head's one bubble level, this panning function allows for perfectly accurate, 360-degree panoramic photography and videography.
- d: Unlock the handle locking knob "H" by turning it counterclockwise. The PH-20T pan head's handle folds inward to make carrying and storing the tripod easy. Lock the handle locking knob "H" by turning it clockwise.

How to use QS-72T

- ⑥ Remove the camera screw to prevent scratching the smartphone. Raise the smartphone holding arm (A1) to a vertical position.

- ⑦ Open the upper smartphone clamp (B2), then pull the smartphone holding arm apart (C3), and insert the smartphone into the clamp.

Note: when installing the mobile phone, the smartphone controls (such as volume and power) should not be caught in the clamp or base.

- ⑧ a. The upper smartphone clamp (B2) includes a cold shoe mount that allows a suitable accessory, such as an LED light or a microphone, to be attached.

- b. There is a 1/4" camera screw hole on the side of the quick shoe (D4) to mount a small support arm.

Français

Merci pour avoir choisi un produit VANGUARD

① DESCRIPTION

- A: Écrou de fixation 1/4"
- B: Attache rapide (QS-72T)
- C: Bouton de serrage pour le basculement de la tête
- D: Goupille de sécurité de l'attache rapide
- E: Bouton de verrouillage de l'attache rapide
- F: Niveau à bulle
- G: Bouton de serrage horizontal de la tête
- H: Bouton de serrage de la poignée
- I: Poignée
- J: Attache rapide (QS-65)
- A1: Bras de maintien du smartphone
- B2: Pince supérieure du smartphone
- C3: Écartez les bras de maintien du smartphone
- D4: 1/4" sur le côté de l'attache rapide

② ENLEVER L'ATTACHE RAPIDE

Tournez le bouton "E" en sens inverse des aiguilles d'une montre jusqu'à ce que l'attache rapide soit débloquée et puisse être enlevée comme présenté sur le schéma.

L'attache rapide peut être replacée à sa place quelque soit sa direction comme indiqué sur le schéma.

③ FIXATION DE L'ATTACHE RAPIDE A L'APPAREIL PHOTO

Alignez le filetage de l'attache rapide à l'orifice de positionnement de votre appareil photo. Pour serrer, utilisez la vis à demi-anneau. Une fois le tout fermement serré, placez l'attache rapide "B" sur la rotule. Tournez "E" dans le sens des aiguilles d'une montre jusqu'au serrage complet.

